HANDIC 2305

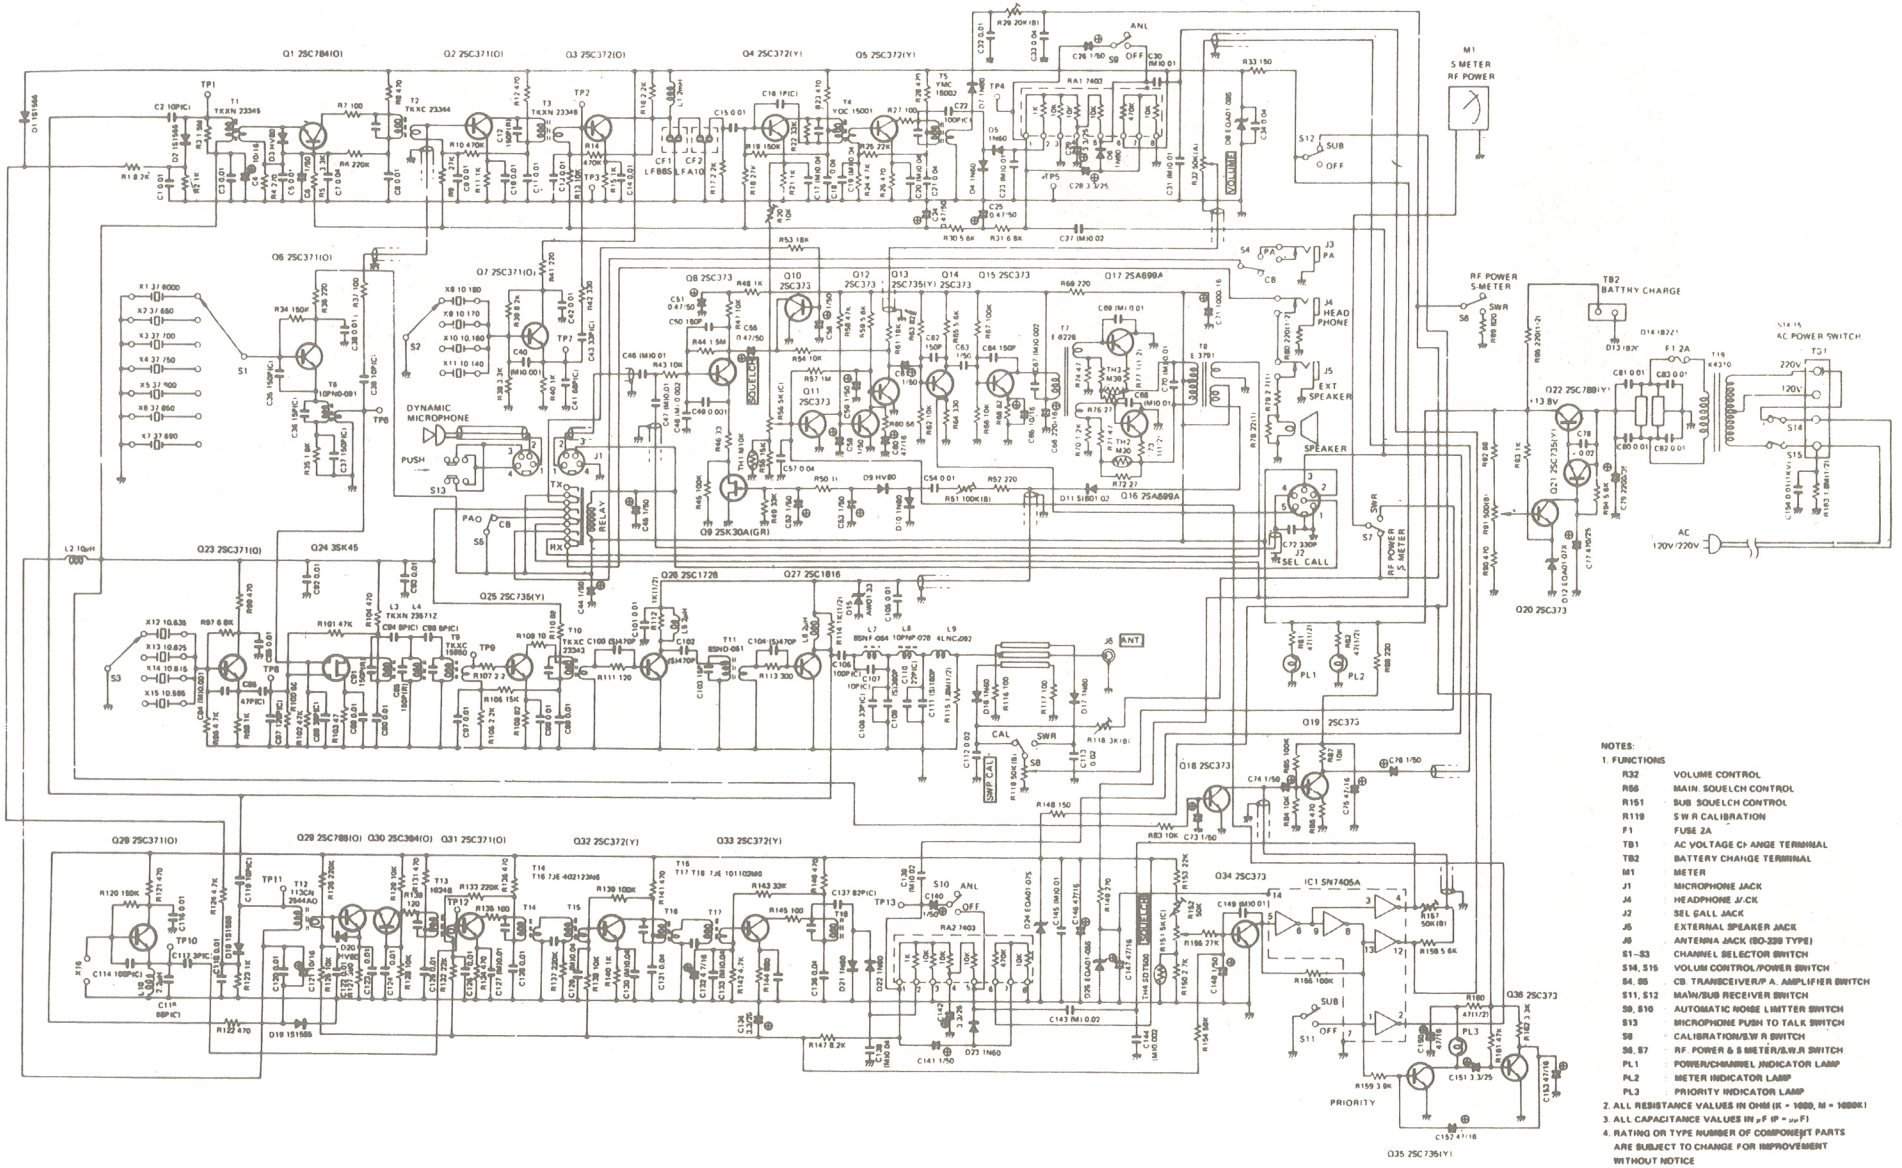

NOTES:

1. FUNCTIONS

R32	VOLUME CONTROL
R66	MAIN. SQUELCH CONTROL
R151	SUB SQUELCH CONTROL
R119	S.W.R CALIBRATION
F1	FUSE 2A
TB1	AC VOLTAGE CHANGE TERMINAL
TB2	BATTERY CHANGE TERMINAL
M1	METER
J1	MICROPHONE JACK
J4	HEADPHONE JACK
J2	SEL CALL JACK
J5	EXTERNAL SPEAKER JACK
J6	ANTENNA JACK (SO-239 TYPE)
S1~S3	CHANNEL SELECTOR SWITCH
S14, S15	VOLUM CONTROL/POWER SWITCH
S4, S5	CB TRANSCEIVER/P.A. AMPLIFIER SWITCH
S11, S12	MAIN/SUB RECEIVER SWITCH
S9, S10	AUTOMATIC NOISE LIMITTER SWITCH
S13	MICROPHONE PUSH TO TALK SWITCH
S8	CALIBRATION/S.W.R SWITCH
S6, S7	RF. POWER & S METER/S.W.R SWITCH
PL1	POWER/CHANNEL INDICATOR LAMP
PL2	METER INDICATOR LAMP
PL3	PRIORITY INDICATOR LAMP

2. ALL RESISTANCE VALUES IN OHM (K = 1000, M = 1000K)
3. ALL CAPACITANCE VALUES IN μF (P = $\mu\mu$F)
4. RATING OR TYPE NUMBER OF COMPONENT PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT WITHOUT NDTICE